



WHY ARE WE INCLUDING A FIRED CARTRIDGE CASE WITH EVERY RUGER PISTOL AND REVOLVER?

Certain states and jurisdictions require that all newly manufactured pistols and revolvers must be accompanied by a cartridge case, which has been test fired from that gun at the factory. The case must be placed in a sealed container bearing certain information concerning this test cartridge.

At the time of retail sale in those jurisdictions, firearms dealers must forward such test cartridge to a designated destination such as their State Police Laboratory. Because independent distributors of Ruger® firearms have nationwide markets without territorial restrictions, we have decided to include a fired cartridge case with all new Ruger pistols and revolvers, to minimize the possibility of inadvertent non-compliance with these laws.

Retail customers located in other states, where laws or regulations do not require the dealer to so act, may be assured that the fired cartridge case they receive with the firearm at the time of retail purchase is proof that your new Ruger firearm has undergone our normal test firing procedures during manufacture.

LOCKING DEVICE INSTALLATION INSTRUCTIONS

 WARNING – USE OF LOCKING DEVICES	
 <p>Do not store keys in lock.</p>	<ul style="list-style-type: none">• Always keep your firearm pointed in a safe direction, including when you are installing or removing your locking device.• Always verify that your firearm is completely <u>unloaded</u> before installing your locking device.• Do <u>not</u> install locking devices in the trigger guard unless the instructions specifically require it; otherwise always keep your fingers and locking device outside the trigger guard during device installation and removal.• Store firearms, ammunition and keys separately and securely, away from children and careless adults; do <u>not</u> store your firearm with the keys in the locking device.• Do not attempt to work the action of your firearm with the locking device in place; this may damage your firearm.• While locking devices are an important aid to security measures, they are not a substitute for safe firearm handling and proper storage. Remember that any mechanical device can be bypassed with enough time, knowledge, determination and equipment.
LOCKING DEVICES MUST BE USED SAFELY AND RESPONSIBLY	

Use the Correct Lock: While the basic locking device is substantially similar for all Ruger® firearms, due to the different shapes of the many Ruger® firearms, some firearms utilize different locking devices. The cable lock is used on the LC9s®. **It is very important to use the correct locking device!**

To Install the Factory-Supplied Locking Device:

1. **Keep the muzzle pointed in a safe direction and your fingers outside the trigger guard at all times!**
2. **Remove the magazine from your pistol.**
3. Open the action completely, **and verify that the firearm is completely unloaded and contains no cartridges or cartridge cases!**

Use the slide stop to keep the action open during installation of the locking device.

4. Insert the cable directly to your pistol as shown in Figure 1.
5. To lock: With the key turned to the farthest clockwise position, insert the loose end of the cable into the lock. Turn the key counterclockwise and remove the key.
6. Once the lock is securely closed, pull firmly on the lock to test the connection and be sure it is locked. **Do not leave or store your firearm with the key in the lock!** Store your locked unloaded firearm and the key in secure, separate locations, away from ammunition, children or unauthorized adults.



Figure 1

**Correct Installation of Cable Lock
For Ruger® LC9s® Pistols**